Ultrasonic Humidifier Model: DEW-03HS, DEW-04HS, DEW-05HS










- Drawer type water tank cover
- 2 Overflow outlet
- 3 High precision floating finger
- Automatic controller (Optional equipment)
- Fog volume regulator
- 6 Sewage outlet
- Waterproof switch box
- 8 Cationic filter
- Self-priming water pump
 (Optional equipment)

WE ARE COMMITTED TO SOLVING ALL KINDS OF INSTALLATION PROBLEMS FOR YOU

INSTALLATION GUIDE

2. Remote humidification through PVC pipe PVC pipe diameter D:50/75/110/160mm Spray hole diameter D:12/16/22/32mm Number of spray holes (D÷ D)² Spray hole spacing is uniform End of pipe sealed and raised 3CM Return the water to the machine

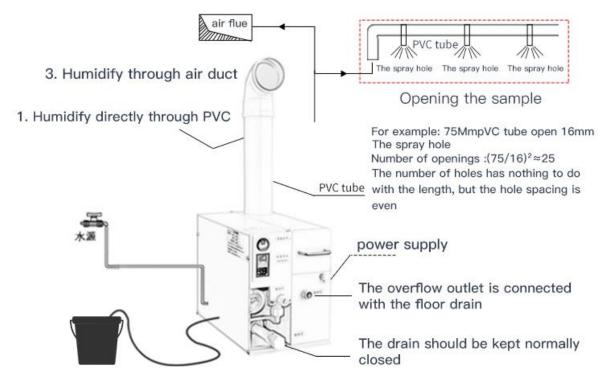

water supply mode: I. 2.2 PE water purifier water pipe is connected with tap water, water supply pressure (0.02Mpa – 0.8Mpa)

The machine with self-priming pump is directly connected to the bucket for water supply. The height of the machine should be higher than the water level of the bucket

Note: 1. Maintain water supply, the machine will automatically feed/stop water to maintain the working water level

2. There are different types of chassis, so the time required for the first time to start the water is different. If the working water level (10CM) is not reached after 5 minutes, please turn off the power and restart the operation after 30 seconds until the machine is naturally atomized.

Ultrasonic Humidifier Features

- 1. Ultrasonic humidifier adopts integrated mist module inside. The chip is replaceable. It is easy to maintain, and boasts high humidification efficiency.
- 2. Diameter of fog output is only 1-5 μ m. Maximum relative humidity reaches 99%.
- 3. Intelligent control, accurate humidity control:
- Humidity control system with imported world leading probe. The control precision is within +3%.
 - Easy to move, convenient to install
 - Both automatic and manual humidify control are available. It depends on you.
- 4. Strong Coating steel body, easy to maintain.
- 5. Equipped with standard water feeding gap, water release switch, overflow gap etc. The water feeding gap will fill water automatically.
- 6. Humidifier can be used a stand alone unit or can be mounted along with the AHU for uniform distribution.
- 7. Automatic start or Automatic stop

Specification

| Model | DEW-03HS | DEW-04HS | DEW-05HS |
|-----------------------|---------------------|---------------------|---------------------|
| Atomization volume | 3Kg/hour | 4Kg/hour | 5Kg/hour |
| Power | 200 W | 250 W | 300 W |
| Voltage: | 220V/ 50 Hz | 220V/ 50 Hz | 220V/ 50 Hz |
| Coverage area | 120 m³ | 150 m³ | 180 m³ |
| Water pressure | 0.1-0.4 MPa | 0.1-0.4 MPa | 0.1-0.4 MPa |
| Water temperature | 1-35 °C | 1-35 °C | 1-35 ℃ |
| Type of water | Clean water/ | Clean water/ | Clean water/ |
| | tap water | tap water | tap water |
| Fog volume adjustment | Available | Available | Available |
| Material | 304 Stainless Steel | 304 Stainless Steel | 304 Stainless Steel |
| Length of the pipe | Not more than | Not more than | Not more than |
| | 7 meters | 7 meters | 7 meters |
| Pipe size | OD 75 mm | OD 75 mm | OD 75 mm |
| Dimension(L*W*H) | 360x200x265 mm | 360x200x265 mm | 360x200x265 mm |
| Net weight | 7.9 Kg | 8.0 Kg | 8.4 Kg |

MULTIPLE SCENARIOS AVAILABLE

Four core functions

